

Anritsu envision : ensure

ShockLine™ 1-Port USB Vector Network Analyzers

MS46121A

150 kHz to 6 GHz



Introduction

The MS46121A is part of the ShockLine™ family of Vector Network Analyzers from Anritsu. It is available in two frequency ranges of 40 MHz to 4 GHz and 150 kHz to 6 GHz, and is capable of 1-port s-parameter and band pass time domain (distance to fault) measurements.

The MS46121A Vector Network Analyzer (VNA) is controlled through USB from an external PC. The MS46121A runs the same software as the rest of the ShockLine family, providing a powerful graphical user interface for testing of passive devices. Up to 16 MS46121A VNAs can be controlled from one computer, making it ideal for testing multiple 1-port devices in parallel for improved test productivity and throughput.

The MS46121A with Option 2 provides a Time Domain Reflectometry (TDR) like display that enables real impedance measurements over frequency. With Option 21, scalar transmission measurements between MS46121A instruments can be performed in various configurations.

This document provides detailed specifications for the MS46121A series Vector Network Analyzer and related options.

Instrument Models and Operating Frequencies

Base Model

- MS46121A, 1-Port ShockLine VNA

Requires one Frequency Option

- MS46121A-004, 40 MHz to 4 GHz, 1-Port
- MS46121A-006, 150 kHz to 6 GHz, 1-Port

Principal Options

- MS46121A-002, Time Domain
- MS46121A-021, Scalar Transmission Measurement



MS46121A ShockLine 1-Port USB VNA

Table of Contents

Definitions 3
 High Level Noise 4
 Output Power 4
 Measurement Stability 4
 Frequency Resolution, Accuracy, and Stability 4
 Uncorrected (Raw) Port Characteristics 4
 Scalar Transmission Measurement Accuracy 4
 VNA System Performance 5
 Measurement Throughput. 5
 Standard Capabilities 6
 Calibration and Correction Capabilities 8
 Remote Operability 8
 Recommended External PC Configuration 8
 Device Connections 9
 Mechanical 9
 Regulatory Compliance. 10
 Environmental 10
 Warranty 10
 Ordering Information 11

Definitions

	All specifications and characteristics apply under the following conditions, unless otherwise stated:
Warm-Up Time	After 30 minutes of warm-up time, where the instrument is left in the ON state.
Temperature Range	Specifications apply over the 25 °C ± 5 °C temperature range.
Error-Corrected Specifications	Specifications are valid over 23 °C ± 3 °C, with < 1 °C variation from calibration temperature.
Frequency Bands in Tables	When a frequency is listed in two rows of the same table, the specification for the common frequency is taken from the lower frequency band.
User Cables	Specifications do not include effects of any user cables attached to the instrument.
Discrete Spurious Responses	Specifications may exclude discrete spurious responses.
Internal Reference Signal	All specifications apply with internal 10 MHz Crystal Oscillator Reference Signal.
Interpolation Mode	All specifications are with Interpolation Mode Off.
Standard	Refers to instruments without Options.
Typical Performance	Typical performance indicates the measured performance of an average unit. It does not include guard-bands and is not covered by the product warranty.
Characteristic Performance	Characteristic performance indicates a performance designed-in and verified during the design phase. It does include guard-bands and is not covered by the product warranty.
Uncertainty	A coverage factor of x1 is applied to the measurement uncertainties to facilitate comparison to other industry analyzers.
Recommended Calibration Cycle	12 months (Residual specifications also require calibration kit calibration cycle adherence.)
Specifications Subject to Change	All specifications are typical unless otherwise noted and are subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com

High Level Noise

Measured at 100 Hz IF bandwidth and at default power level, RMS.

Frequency	Magnitude (dB)	Phase Noise (deg RMS)
150 kHz to 6 GHz	0.02	0.2

Output Power

Frequency	Power Setting	Standard (dBm)
150 kHz to 23.2 MHz	Default	-5 dBm
>23.2 MHz to 4 GHz	Default	+3 dBm
>4 GHz to 6 GHz	Default	-5 dBm

Measurement Stability

Ratio measurement, with ports shorted.

Frequency	Magnitude (dB/°C)
1 MHz to 6 GHz	0.02

Frequency Resolution, Accuracy, and Stability

Resolution	Accuracy	Stability	Aging
1 Hz ^a	±0.5 ppm (at time of calibration)	±1.0 ppm from -10 °C to +55 °C	±1.0 ppm/year

a. Frequency resolution is 10 kHz when using an external reference.

Uncorrected (Raw) Port Characteristics

User and System Correction Off.

Frequency	Directivity (dB)	Port Match (dB)
150 kHz to 6 GHz	10 dB ^a	10 dB ^b

a. Raw directivity specification degrades by 2 dB above 4 GHz.

b. Raw port match specification degrades by 5 dB above 4 GHz.

Scalar Transmission Measurement Accuracy

Measurement accuracy is specified @ 1 kHz IFBW with external reference, scalar normalization On, and from 0 dB to -50 dB insertion loss levels.

Scalar transmission is functional to 6 GHz.

Frequency	Accuracy (dB)
>150 kHz to 4 GHz	±1.0

VNA System Performance


Error-Corrected Specifications

With calibration using TOSLN50A-8 or TOSLNF50A-8 N-type connector manual calibration kits or the MN25208A SmartCal™ automatic calibration kit with connector options MN25208A-001, -002, -003, and -004¹.

Frequency Range	Directivity (dB)	Source Match (dB)	Reflection Tracking (dB)
150 kHz to 4 GHz	42	35	±0.1
> 4 GHz to 6 GHz	42	27	±0.2

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

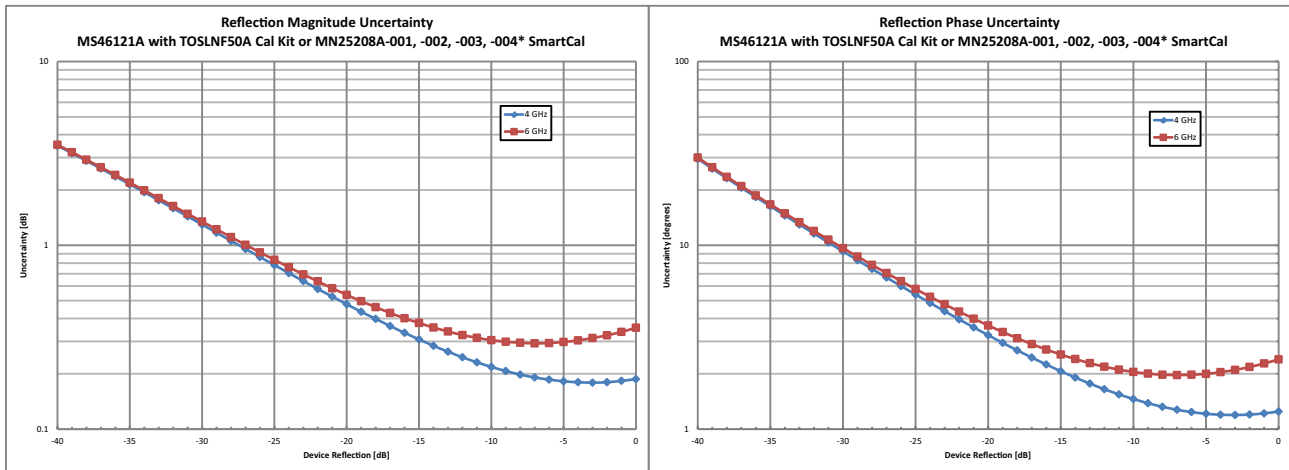

Measurement Throughput

Measurement Speed

120 μs/point, typical. Per point single sweep time, including placing measurement data into memory. Average of narrow, mid, and wide frequency span sweeps. 100 kHz IFBW, 1601 points, 1 port calibrated data measurement. Timing dependent on external computer configuration. Measurements taken with an Intel® Core™ i5-6300U processor running Windows 7 with 4 GB of RAM and 60 GB of free hard disk space.

1. Specifications are not warranted. All specifications are typical.

Standard Capabilities

Operating Frequencies	
MS46121A-004	40 MHz to 4 GHz
MS46121A-006	150 kHz to 6 GHz
Measurement Parameters	
1-Port Measurements	S_{11} or any user-defined combination of a_1 , b_1 , 1
2-Port Measurements	$S_{ XY }$ where Y is the source and X is the receiver
Domains	Frequency Domain and Band Pass Time Domain (Distance to Fault)
Sweeps	
Frequency Sweep Types	Linear, Log, or Segmented
Display Graphs	
Single Rectilinear Graph Types	Log Magnitude, Phase, Linear Magnitude, Real, Imaginary, SWR, and Impedance
Dual Rectilinear Graph Types	Log Mag and Phase, Linear Mag and Phase, Real and Imaginary
Circular Graph Types	Smith Chart, Polar
Measurements Data Points	
Maximum Data Points	2 to 20,001 points
Limit Lines	
Limit Lines	Single or segmented. 2 limit lines per trace. 50 segments per trace.
Single Limit Readouts	Uses interpolation to determine the intersection frequency.
Test Limits	Both single and segmented limits can be used for PASS/FAIL testing.
Ripple Limit Lines	
Limit Lines	Single or segmented. Two limit lines per trace. 50 segments per trace.
Ripple Value	Absolute Value or Margin
Test Limits	Both single and segmented limits can be used for PASS/FAIL testing.
Averaging	
Point-by-Point	Point-by-point (default), maximum number of averages = 4096
Sweep-by-Sweep	Sweep-by-sweep, maximum number of averages = 4096
IF Bandwidth	
	10, 20, 30, 50, 70, 100, 200, 300, 500, 700 Hz 1, 2, 3, 5, 7, 10, 20, 30, 50, 100 kHz
IF Bandwidth (Option 21)	
External Reference Enabled	1, 2, 3, 5, 7, 10, 20, 30, 50, 100 kHz
Internal Reference Enabled	10, 20, 30, 50, 100 kHz
Reference Plane	
Line Length or Time Delay	The reference planes of a calibration or other normalization can be changed by entering a line length or time delay.
Dielectric Constants	Dielectric constants may be entered for different media so the length entry can be physically meaningful.
Dispersion Modeling	Dispersion modeling is used in the cases of microstrip and waveguide to take into account frequency dependent phase velocities.
Attenuations	Attenuations and constant phase offsets can be entered to better describe any reference plane distortions.
De-embedding	For more complete reference plane manipulation, the full de-embedding system can also be used.
Measurement Frequency Range	
Frequency Range Change	Frequency range of the measurement can be narrowed within the calibration range without recalibration.
CW Mode	CW mode permits single frequency measurements also without recalibration.
Interpolation Not Activated	If interpolation is not activated, the subset frequency range is forced to use calibration frequency points.
Interpolation Activated	If interpolation is activated, any frequency range that is a subset of the calibration frequency range can be used, but there may be some added interpolation error.

Channels, Display, and Traces

Channels	Up to 16 MS46121A VNAs can operate in parallel while controlled from a single host computer. ShockLine software dedicates one channel per MS46121A VNA with 16 channels maximum
Traces	Each channel supports up to 16 data traces.
Display Colors	Unlimited colors for data traces, memory, text, markers, graticules, and limit lines
Trace Memory and Math	A separate memory for each trace can be used to store measurement data for later display or subtraction, addition, multiplication or division with current measurement data. The trace data can be saved and recalled.
Intra-trace Math	Any two traces within a channel can be combined (via addition, subtraction, multiplication, or division) and displayed on another trace.

Scale Resolution

	Minimum per division, varies with graph type.
Log Magnitude	0.001 dB
Linear Magnitude	10 μ U
Phase	0.01°
Time	0.0001 ps
Distance	0.1 μ m
SWR	10 μ U

Markers

Markers	12 markers + 1 reference marker
Marker Coupling	Coupled or decoupled
Marker Data	Data displayed in graph area or in table form
Reference Marker	Additional marker per trace for reference
Marker Statistics	Mean, maximum, minimum, standard deviation
	Per trace or over a marker region
Marker Search and Tracking	Search and/or track for minimum, maximum, peak, or target value

Other

Filter Parameters	Display bandwidth (user-selectable loss value), corner and center frequencies, loss, Q, and shape factors.
S-Parameter Conversion	Z Reflection Impedance Z Transmission Impedance Y Reflection Admittance Y Transmission Admittance 1/S

Calibration and Correction Capabilities

Calibration Methods		Open Short Load (OSL) Offset Short (SSL) Triple Offset Short (SSS) SmartCal™ AutoCal™
Correction Models		1-Port Reflection Frequency Response (S_{11}) 2-Port Transmission Frequency Response (Scalar) ($S_{ XY }$) where Y is the source and X is the receiver
Coefficients for Calibration Standards		Use the Anritsu calibration kit USB memory device to load kit coefficients and characterization files. Enter coefficients into user-defined locations. Use complex load models.
Interpolation		Allows interpolation between calibration frequency points.
Dispersion Compensation		Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip
Embedding/De-embedding		The MS46121A is equipped with an Embedding/De-embedding system.
De-embedding		De-embedding is generally used for removal of test fixture contributions, modeled networks, and other networks described by S-parameters (s2p files) from measurements.
Embedding		Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement.
Multiple Networks		Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily.

Remote Operability

ShockLine supports several remote operability options.

Communication Type	Data Format	Performance	Description
Drivers	IVI-C drivers are available for download from the Anritsu website. The IVI-C package supports National Instruments LabVIEW and LabWindows, C#, .NET, MATLAB, and Python programming environments.		
Triggering	Start Trigger	Software	

Recommended External PC Configuration

CPU	Intel® Core™ i5-6300U Processor
RAM	4 GB
Disk	120 GB
DirectX	Version 9 with Windows Display Driver Model (WDDM) installed
USB	One USB 2.0 (or higher) type A port per MS46121A used
	To increase the number of USB ports available an externally powered USB hub may also be used.
	ShockLine software is compatible with Windows® 7, 8, 8.1, or 10; 32 or 64 bit operating systems

Device Connections



Test Port 1		
	MS46121A	N(m)
	Damage Input Levels	+23 dBm maximum, ±50 VDC maximum
External Reference In		
	Frequency Input	10 MHz (better than 10 ppm frequency accuracy is recommended)
	Connector Type	MCX(f)
	Signal	0.89 V _{pp} , minimum; 80 Ω, nominal
USB Ports		
		One Micro USB 2.0 port for connecting to an external PC controller. For multiple MS46121A instruments on one PC, an externally powered USB 2.0 hub is recommended
Mechanical		
Dimensions	W x H x D	52 mm x 148 mm 36 mm
Weight		< 0.4 kg (< 0.9 lb), typical weight

Regulatory Compliance

European Union	EMC 2014/30/EU, EN 61326:2013, CISPR 11/EN 55022, IEC/EN 61000-4-2/3/4/5/6/58/11 Low Voltage Directive 2014/35/EU Safety EN 61010-1:2010, IEC 60950-1 (when used with Anritsu Company supplied Power Supply) RoHS Directive 2011/65/EU
Australia and New Zealand	RCM AS/NZS 4417:2012
South Korea	KCC-REM-A21-0004

Environmental

	MIL-PRF-28800F Class 2
Operating Temperature Range	-10 °C to 55 °C
Storage Temperature Range	-51 °C to 71 °C
Maximum Relative Humidity	95 % RH at 40 °C, non-condensing
Vibration, Sinusoidal	5 Hz to 55 Hz
Vibration, Random	10 Hz to 500 Hz
Half Sine Shock	30 g _n

Warranty

Instrument and Built-In Options	Three (3) years from the date of shipment (standard warranty)
Calibration Kits	Typically 1 year from the date of shipment
Test Port Cables	Typically 1 year from the date of shipment
Warranty Options	Additional warranty available

Ordering Information

Instrument Models	
Base Model	MS46121A, ShockLine™ 1-Port USB VNA
Required Option	MS46121A-004, 40 MHz to 4 GHz, type N(m) port
(Select one frequency option only)	MS46121A-006, 150 kHz to 6 GHz, type N(m) port
Included Accessories	
User Documentation	Each VNA comes with a set of included accessories. Getting Started with Anritsu Flier, provides access to all ShockLine web content and services.
USB Cable	2000-1606-R, USB-A to Micro-B with latch cable, 1.8 m (6 ft)
Main VNA Option	
MS46121A-002	Low Pass Time Domain
MS46121A-021	Scalar Transmission Measurement
Precision Automatic Calibrator Module	
MN25208A	2-port USB SmartCal Module, 300 kHz to 8.5 GHz (available with various connector options)
MN25408A	4-port USB SmartCal Module, 300 kHz to 8.5 GHz
MN25418A	2-port USB SmartCal Module, 1 MHz to 20 GHz
36585K-2M	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(m)
36585K-2F	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(f) to K(f)
36585K-2MF	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(f)
Mechanical Calibration Kits	
3653A	N Connector Calibration Kit, Without Sliding Loads, DC to 18 GHz, 50 Ω
OSLN50A-8	Precision N Male Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
OSLNF50A-8	Precision N Female Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
TOSLN50A-8	Precision N Male Through/Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
TOSLNF50A-8	Precision N Female Through/Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
RF Cables and Adapters	
1091-26-R	SMA(m) to N(m), DC to 18 GHz, 50 Ω
1091-27-R	SMA(f) to N(m), DC to 18 GHz, 50 Ω
1091-80-R	SMA(m) to N(f), DC to 18 GHz, 50 Ω
1091-81-R	SMA(f) to N(f), DC to 18 GHz, 50 Ω
71693-R	Ruggedized adapter, K(f) to N(f), DC to 18 GHz, 50 Ω
34NK50	Precision Adapter, N(m) to K(m), DC to 18 GHz, 50 Ω
34NKF50	Precision Adapter, N(m) to K(f), DC to 18 GHz, 50 Ω
34NFK50	Precision Adapter, N(f) to K(m), DC to 18 GHz, 50 Ω
34NFKF50	Precision Adapter, N(f) to K(f), DC to 18 GHz, 50 Ω
K220B	Precision Adapter, DC to 40 GHz, K(m) to K(m), 50 Ω
K222B	Precision Adapter, DC to 40 GHz, K(f) to K(f), 50 Ω
K224B	Precision Adapter, DC to 40 GHz, K(m) to K(f), 50 Ω
Test Port Cables, Flexible, Ruggedized, Phase Stable	
15NNF50-1.0B	1.0 m (39"), DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 50 Ω
15NNF50-1.5B	1.5 m (59"), DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 50 Ω
15NNS50-1.0B	1.0 m (39"), DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(m) to N(m), 50 Ω
15LL50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, 3.5 mm(m) to 3.5 mm(m), 50 Ω
15LLF50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, 3.5 mm(m) to 3.5 mm(f), 50 Ω
15KK50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, K(m) to K(m), 50 Ω
15KKF50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, K(m) to K(f), 50 Ω
Tools	
01-200	Calibrated Torque End Wrench, GPC-7 and Type N
01-201	Torque End Wrench, 5/16 in, 0.9 N·m (8 lbf·in) (for tightening male devices, for SMA, 3.5 mm, 2.4 mm, K, and V connectors)
01-203	Torque End Wrench, 13/16 in, 0.9 N·m (8 lbf·in) (for tightening ruggedized SMA, 2.4 mm, K and V test port connectors)
01-204	End Wrench, 5/16 in, Universal, Circular, Open-ended (for SMA, 3.5 mm, 2.4 mm, K, and V connectors)
More Information	Refer to our Precision RF & Microwave Components Catalog for descriptions of adapters and other components.

Documentation

User Documentation	Soft copies of the manuals as Adobe Acrobat PDF files are available for download from the instrument model web page at www.anritsu.com . For more information and product support, please contact ShockLineVNA.support@Anritsu.com .
10100-00067	Product information, compliance, and safety
10410-00344	MS46121A/B Series VNA User Guide
10410-00337	MS46121A/B, MS46122A/B, and MS46322A/B Series VNA User Interface Reference Manual
10410-00338	MS46121A/B, MS46122A/B, and MS46322A/B Series VNA Programming Manual

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com/training



• United States

Anritsu Company

1155 East Collins Blvd, Suite 100
Richardson, TX 75081, U.S.A.
Toll Free: 1-800-267-4878
Phone: +1-972-644-1777
Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120
Kanata, Ontario K2V 1C3, Canada
Phone: +1-613-591-2003
Fax: +1-613-591-1006

• Brazil

Anritsu Eletrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar
01327-010 Bela Vista, São Paulo, Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada
11520 México, D.F., México
Phone: +52-55-1101-2370
Fax: +52-55-5254-3147

• United Kingdom

Anritsu EMEA Ltd.

200 Capability Green
Luton, Bedfordshire LU1 3LU
United Kingdom
Phone: +44-1582-433280
Fax: +44-1582-731303

• France

Anritsu S.A.

12 Avenue du Québec
Bâtiment Iris 1-Silic 612
91140 Villebon-sur-Yvette, France
Phone: +33-1-60-92-15-50
Fax: +33-1-64-46-10-65

• Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.r.l.

Via Elio Vittorini 129
00144 Roma, Italy
Phone: +39-06-509-9711
Fax: +39-06-502-2425

• Sweden

Anritsu AB

Kistagången 20B
164 40 KISTA, Sweden
Phone: +46-8-534-707-00
Fax: +46-8-534-707-30

• Finland

Anritsu AB

Teknobulevardi 3-5
FI-01530 Vantaa, Finland
Phone: +358-20-741-8100
Fax: +358-20-741-8111

• Denmark

Anritsu A/S

Kay Fiskers Plads 9
2300 Copenhagen S, Denmark
Phone: +45-7211-2200
Fax: +45-7211-2210

• Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor
Moscow, 125009, Russia
Phone: +7-495-363-1694
Fax: +7-495-935-8962

• Spain

Anritsu EMEA Ltd.

Edificio Cuzco IV, Po. de la Castellana, 141, Pta. 8
28046, Madrid, Spain
Phone: +34-915-726-761
Fax: +34-915-726-621

• United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office
902, Aurora Tower,
P O Box: 500311- Dubai Internet City
Dubai, United Arab Emirates
Phone: +971-4-3758479
Fax: +971-4-4249036

• India

Anritsu India Private Limited

2nd & 3rd Floor, #837/1, Binnamangla 1st Stage
Indiranagar, 100ft Road, Bangalore - 560038, India
Phone: +91-80-4058-1300
Fax: +91-80-4058-1301

• Singapore

Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shiro House
Singapore 159640
Phone: +65-6282-2400
Fax: +65-6282-2533

• P.R. China (Shanghai)

Anritsu (China) Co., Ltd.

27th Floor, Tower A
New Caohejing International Business Center
No. 391 Gui Ping Road Shanghai, Xu Hui Di District
Shanghai 200233, P.R. China
Phone: +86-21-6237-0898
Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower
Concordia Plaza
No. 1 Science Museum Road, Tsim Sha Tsui East
Kowloon, Hong Kong, P. R. China
Phone: +852-2301-4980
Fax: +852-2301-3545

• Japan

Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi
Kanagawa, 243-0016 Japan
Phone: +81-46-296-1221
Fax: +81-46-296-1238

• Korea

Anritsu Corporation, Ltd.

5FL, 235 Pangyoyeok-ro, Bundang-gu
Seongnam-si
Gyeonggi-do, 463-400 Korea
Phone: +82-31-696-7750
Fax: +82-31-696-7751

• Australia

Anritsu Pty. Ltd.

Unit 20, 21-35 Ricketts Road,
Mount Waverley, Victoria 3149, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd, Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817

List Revision Date: 20160222

Data subject to change without notice.
For the most recent specifications, visit: www.anritsu.com.